




NEW SIGN KIT INSTALLATION

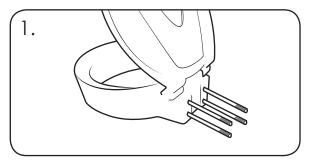


Insert the M8 Hex Bolts through the Orbis fixing holes.

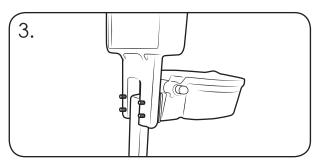


Locate the Sign Carrier's fixing holes on to the exposed bolts protruding through the rear of the Orbis Post.

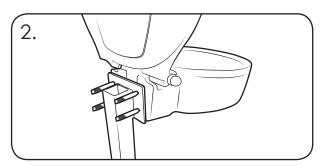


Insert the Orbis with the bolts through the holes of the Orbis Post(supplied separately).

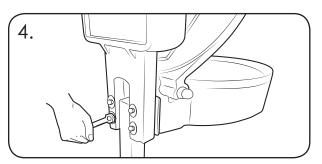


Secure in position with M8 Washers and Nuts using 13mm Spanners.

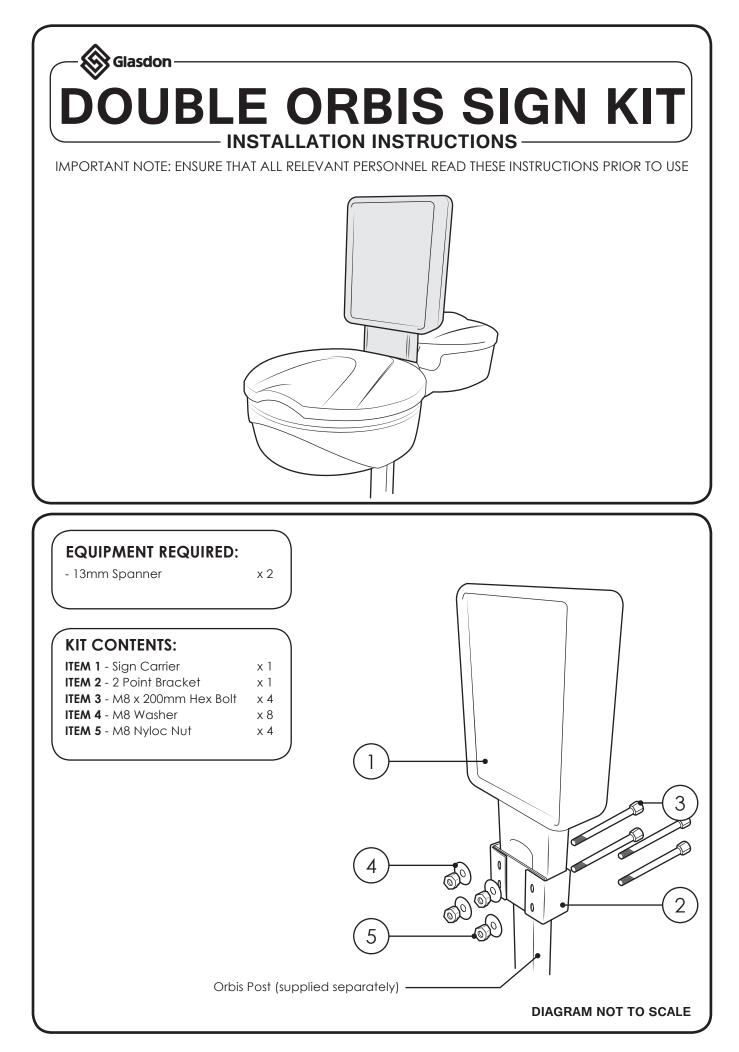


NEW SIGN KIT INSTALLATION

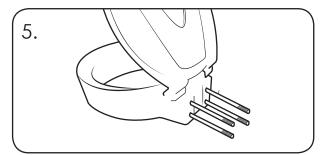


Insert the M8 Hex Bolts through the Orbis fixing holes.

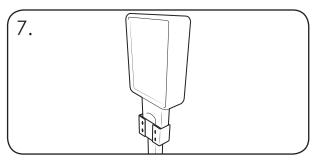


Then align the Sign Carrier fixing holes with the 2 Point Bracket and the Orbis Post.

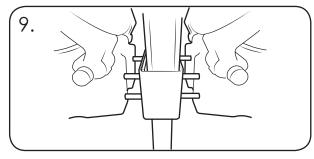


Locate second Orbis onto the exposed fixing bolts, which will hold all the units together.

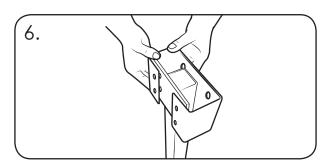

Align the 2 Point Bracket with the fixing holes on the Orbis Post.

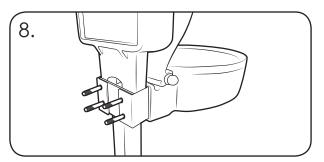

Locate Orbis with fixing bolts in to the 2 Point Bracket, Orbis Post and Sign Carrier.

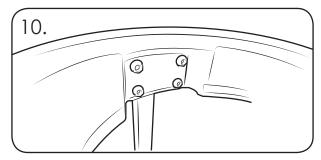

Secure in position with M8 Washers and Nuts using 13mm Spanners.

IMPORTANT NOTE: PLEASE ENSURE THAT ALL RELEVANT PERSONNEL READ THE POINTS LISTED WITHIN THIS LEAFLET AND THAT A COPY IS GIVEN TO STAFF INVOLVED WITH THE INSTALLATION AND MAINTENANCE OF THIS PRODUCT. **SAFETY NOTE:** PLEASE REFER TO 'THE MANUAL HANDLING OPERATIONS REGULATIONS 1992' DURING HANDLING.



Should you require any further assistance please contact us on tel: 01253 600410, fax: 01253 792558 or email: sales@glasdon-uk.co.uk